


MCVST Variable Speed Transfer Switch Controller

MASTER



LR = LINE REACTOR
 DCLR = DC LINK REACTOR (WHEN USED)

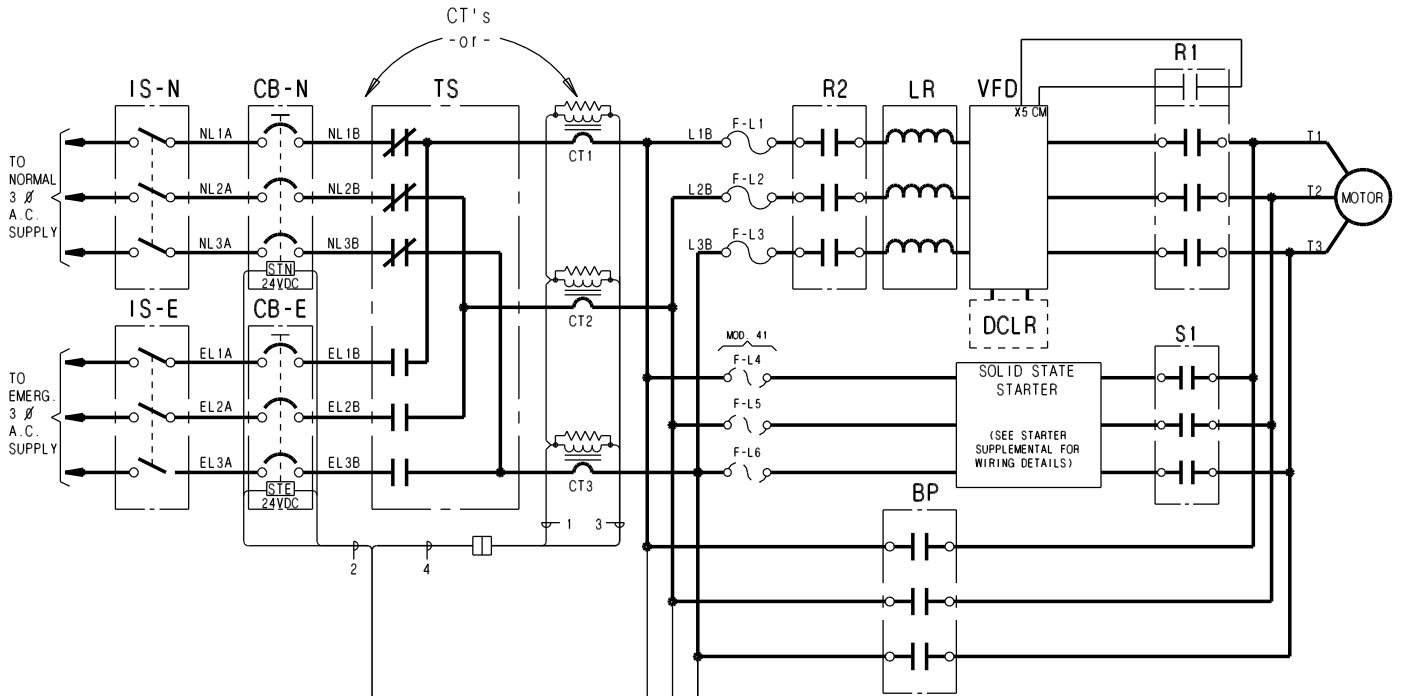