


MASTER FIRE PUMP CONTROLLER

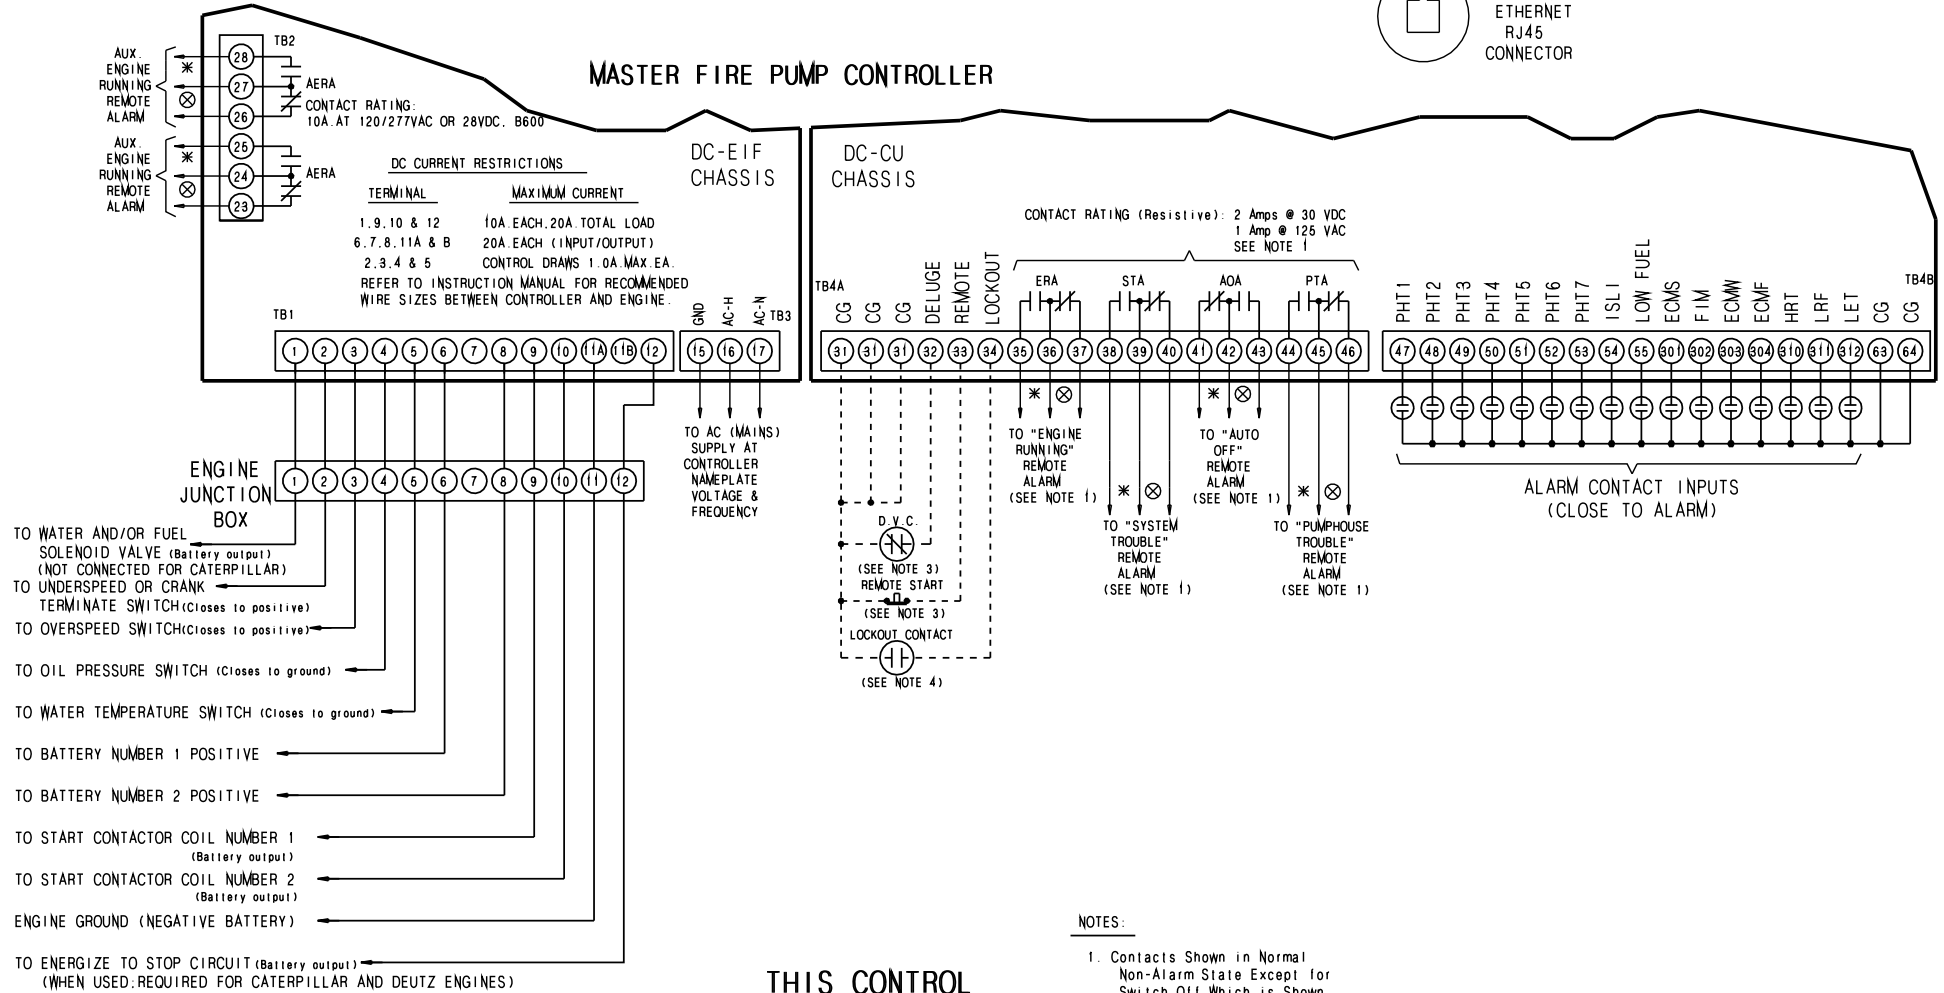

**THIS CONTROL
NEGATIVE GROUND**

NOTES:

1. Contacts Shown in Normal Non-Alarm State Except for Switch Off Which is shown in Alarm State.
* - Contacts CLOSE to ALARM
⊗ - Contacts OPEN to ALARM
2. Typical Alarms. Contacts Close to Alarm.
3. Deluge Valve (Maintained) Contacts Remote Start (Momentary) Contacts. Open to start Pump.
4. Lockout contact(s). CLOSE to LOCKOUT PUMP (not UL/FM)

FOR USE WITH
UL LISTED AND FM
APPROVED ENGINES:
CATERPILLAR
CLARKE
CLUMINS
DEUTZ

