


## MASTER FIRE PUMP CONTROLLER

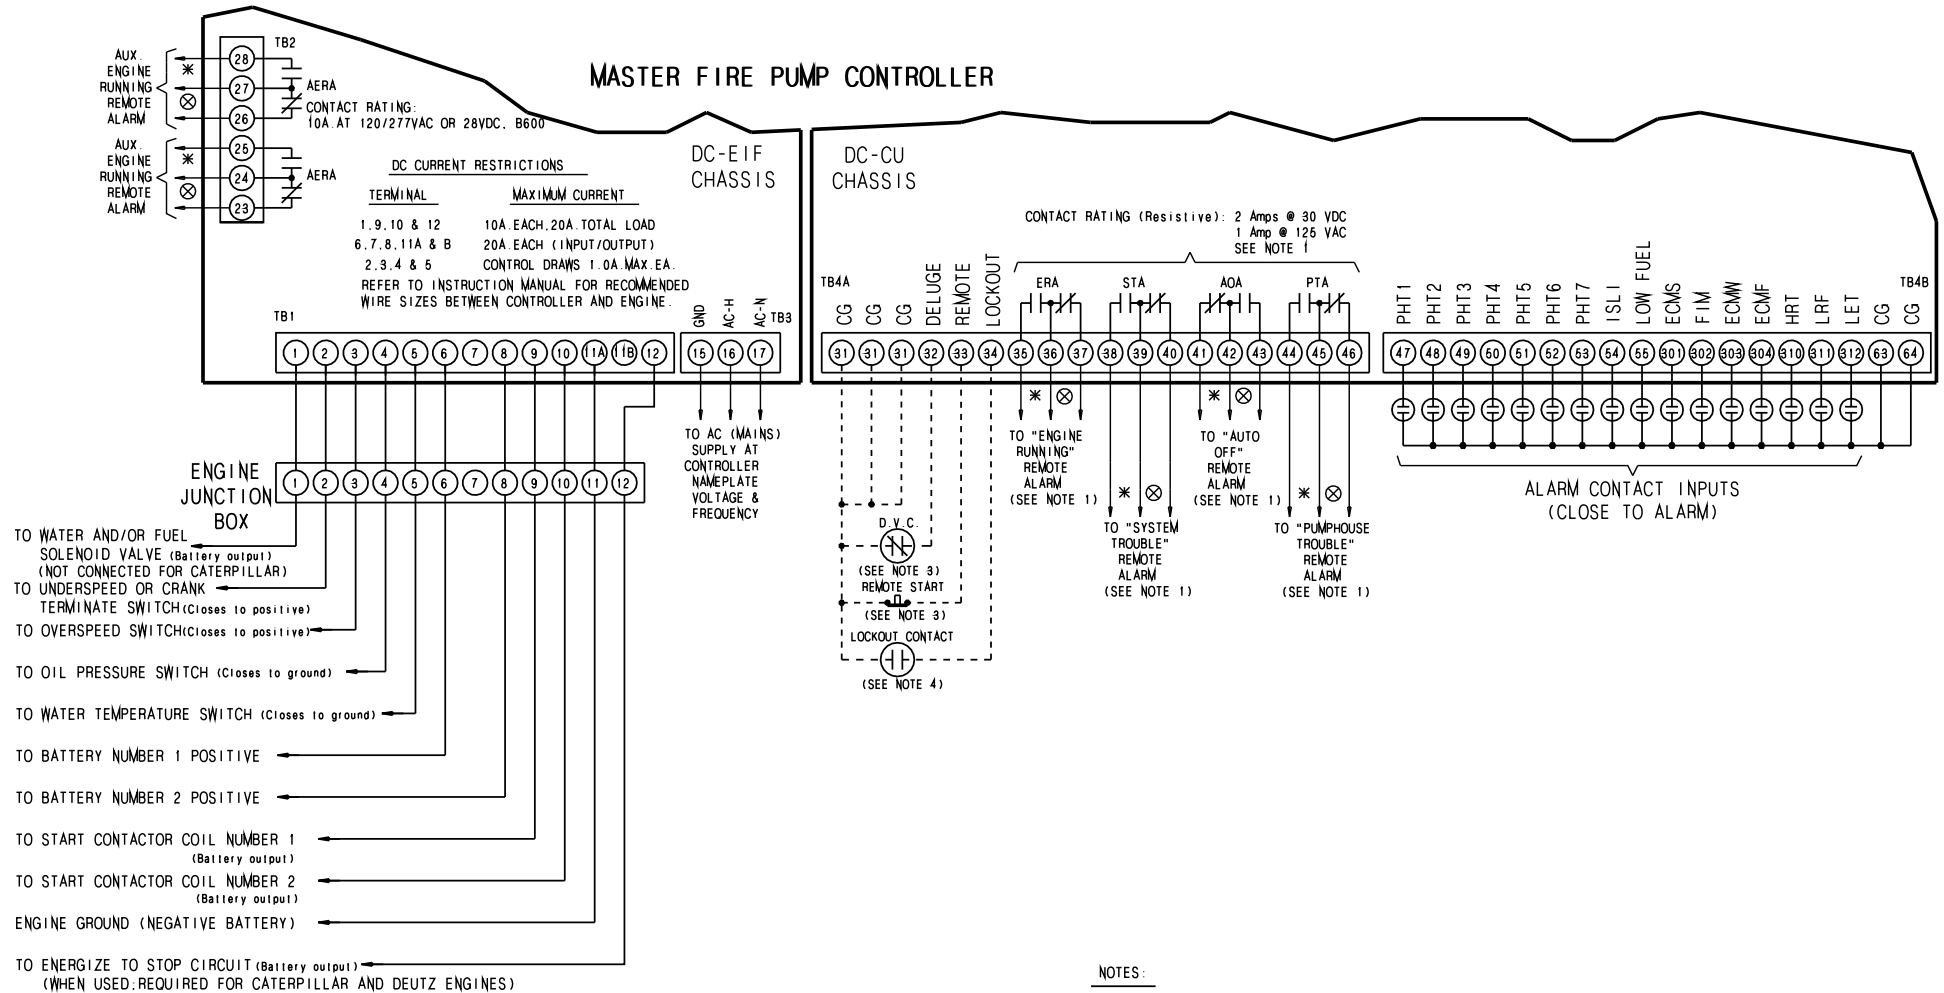

**THIS CONTROL  
NEGATIVE GROUND**

**NOTES:**

1. Contacts Shown in Normal Non-Alarm State Except for Switch Off Which is Shown in Alarm State.  
\* - Contacts CLOSE to ALARM  
⊗ - Contacts OPEN to ALARM
2. Typical Alarms. Contacts Close to Alarm.
3. Deluge Valve (Maintained) Contacts Remote Start (Momentary) Contacts. Open to start Pump.
4. Lockout contact(s). CLOSE to LOCKOUT PUMP (not UL/FM)

FOR USE WITH  
UL LISTED AND FM  
APPROVED ENGINES:  
CATERPILLAR  
CLARKE  
CUMMINS  
DEUTZ



LISTED



APPROVED

