

PUMP TROUBLE ALARM FIELD INPUT DEFINITIONS	
PT 1	
PT 2	
PT 3	
PT 4	
PT 5	
PT 6	
PT 7	
PT 8	

AUX ALARM CONTACTS  
PROGRAM ALARM FUNCTION  
VIA HMI TOUCH SCREEN ON DOOR

FIELD ALARM RELAY DEFINITIONS	
AUX 1	
AUX 2	
AUX 3	
AUX 4	
AUX 5	
AUX 6	DRIVE BYPASS
AUX 7	OVERPRESSURE
AUX 8	DRIVE FAULT

