



NOTES:

TRANSFER SWITCH SHOWN IN NORMAL POSITION

LIMIT SWITCHES SN & SE ARE ALL LOCATED ON THE TRANSFER SWITCH POWER PANEL

➤➤ ZJ6, ZJ7 & ZJC Zenith pin #'s