

MCA Across the Line Fire Pump Controller

MASTER


Notes:

- 1) Deluge Valve (maintained) contact(s) & Remote Start (momentary) contact(s) OPEN to start pump.
- 2) Lockout contact(s) CLOSE to lockout pump.
- 3) Power Failure Alarm (PAR) contacts shown in Alarm State. All others shown Normal.

CONTROLLER SUITABLE FOR USE AS SERVICE EQUIPMENT

GROUNDING SERVICE CONDUCTOR GROUNDING ELECTRODE CONDUCTOR

to
1 ∅ A.C.
SUPPLY

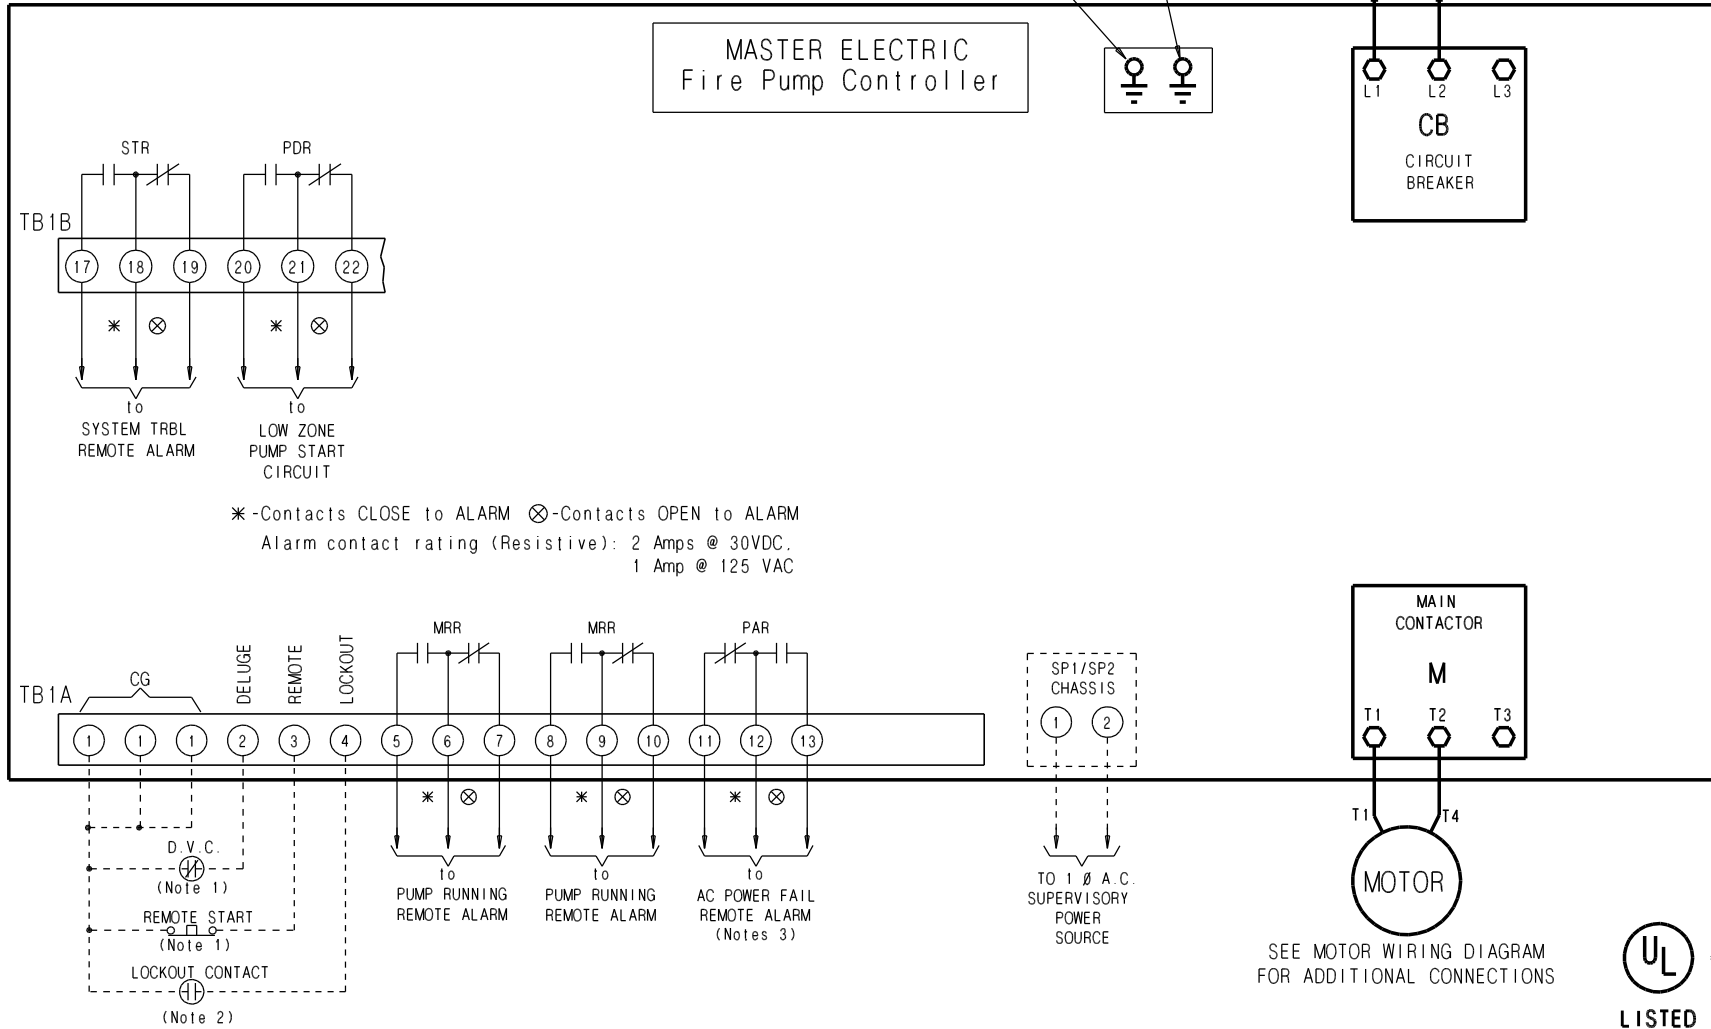

Master Control Systems Inc.
LAKE BLUFF, ILLINOIS U.S.A.

MODEL MCA SINGLE PHASE EXTERNAL WIRING DIAGRAM - G4 - MOD 30

Date 4 December 2014

Drawing 20100

Issue 2