


# MCTT Autotransformer Transfer Switch Fire Pump Controller

**MASTER**

**Notes:**

- 1) Deluge Valve (maintained) contact(s) & Remote Start (momentary) contact(s) OPEN to start pump.
- 2) Lockout contact(s) CLOSE to lockout pump.
- 3) Power Failure Alarm (PAR) & Genset Start (GSR) contacts shown in Alarm or Starting State. All others shown Normal.

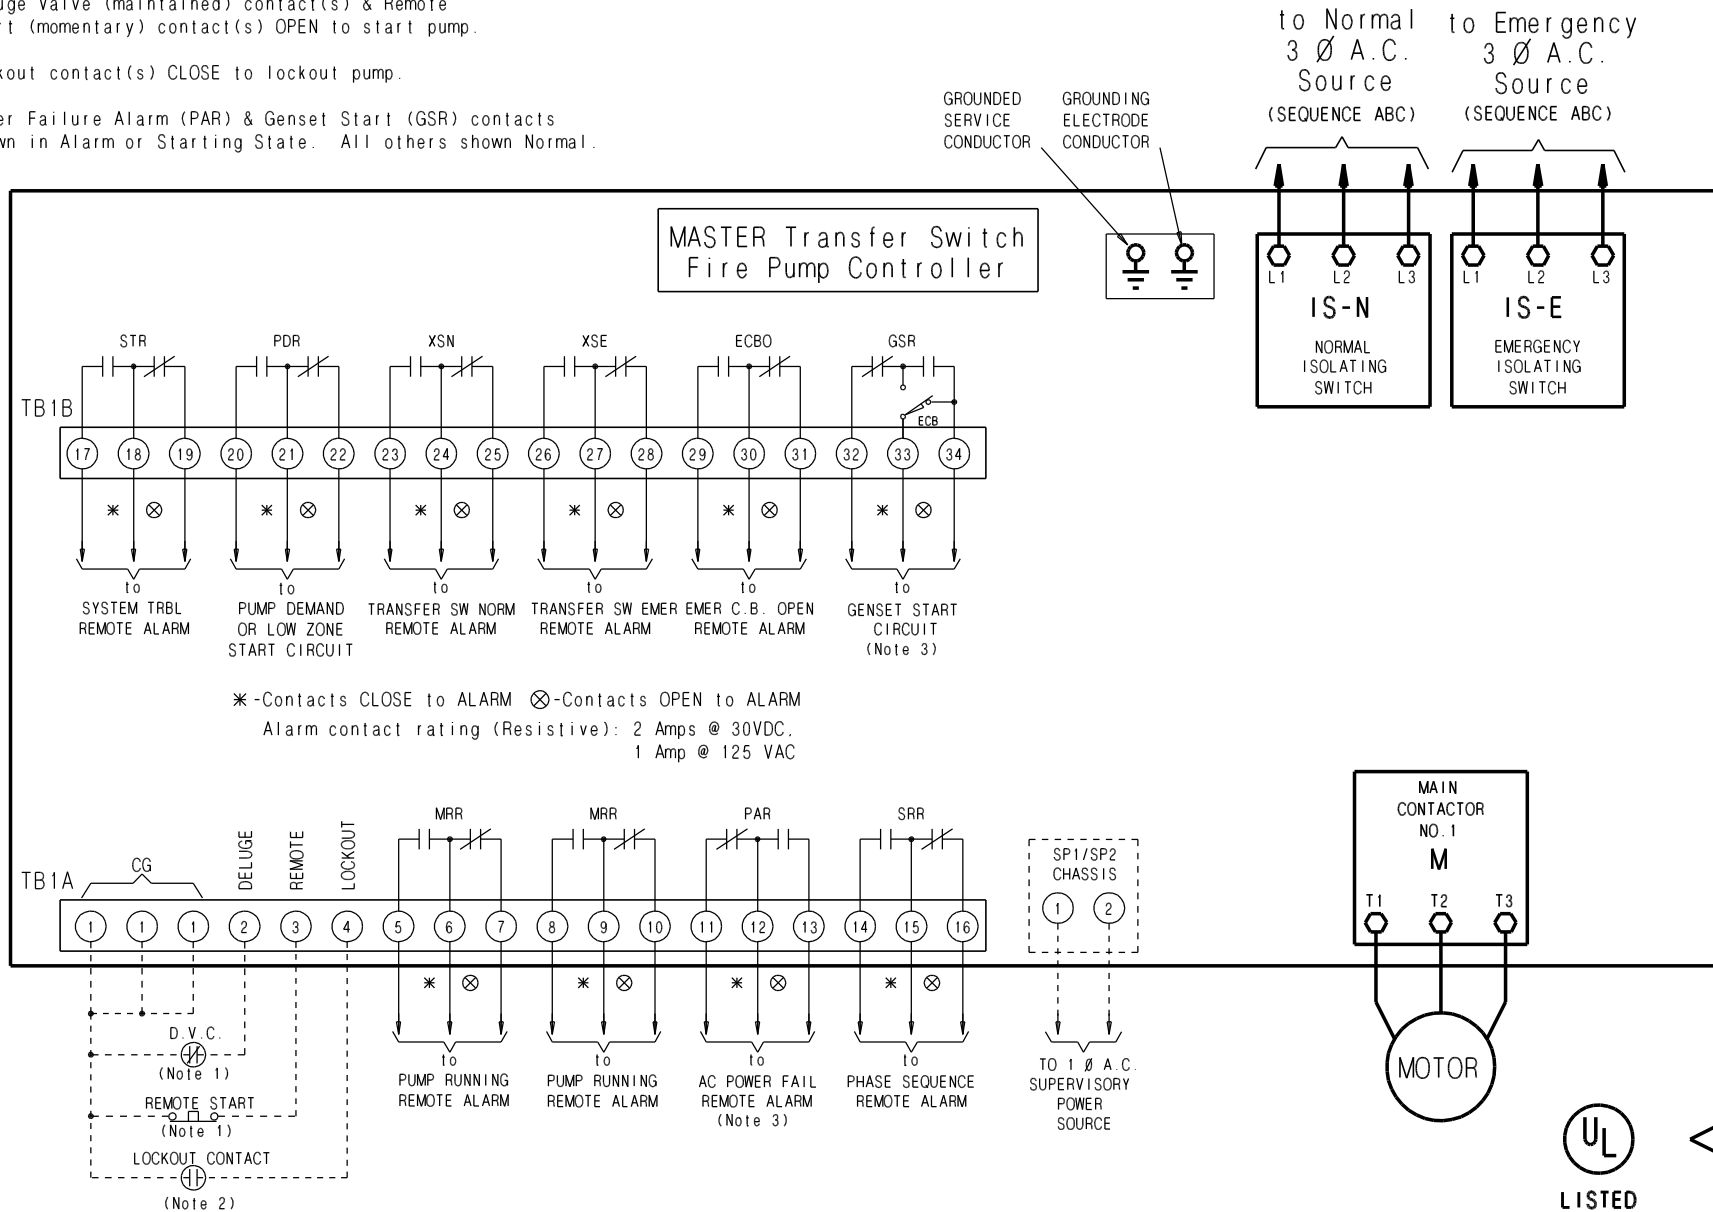

**Master Control Systems Inc.**  
LAKE BLUFF, ILLINOIS U.S.A.

MODEL MCTT EXTERNAL WIRING DIAGRAM - G4

Date 10 Jan 2014

Drawing 20118

Issue 2