




KWM
NOTE: PRESSURE SWITCH TERMINAL BAR USED ON S/N 71416 & UP

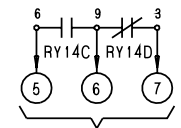


to PUMP RUNNING Alarm

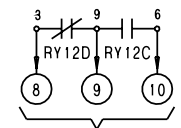


to MAIN AC FAILURE Alarm

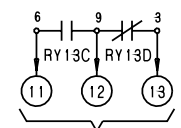


to PHASE REVERSAL Alarm

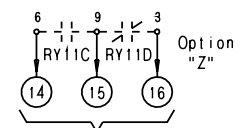


to LOW ZONE PUMP RUN

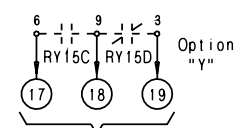

to MOTOR OVERLOAD Alarm

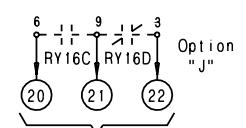

to FAILURE TO START Alarm

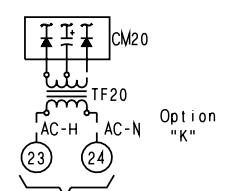

from SUPERVISORY POWER source