



NOTE 1: Rotate 3 Power Wires to the LEFT as shown to change LEAD/LAG Status without changing motor rotation.

2: To change Motor Rotation, swap any two sets (pole pairs) of Power Wires at the Circuit Breaker or Isolating Switch Load Side

